




Runabout® Manual Downrigger

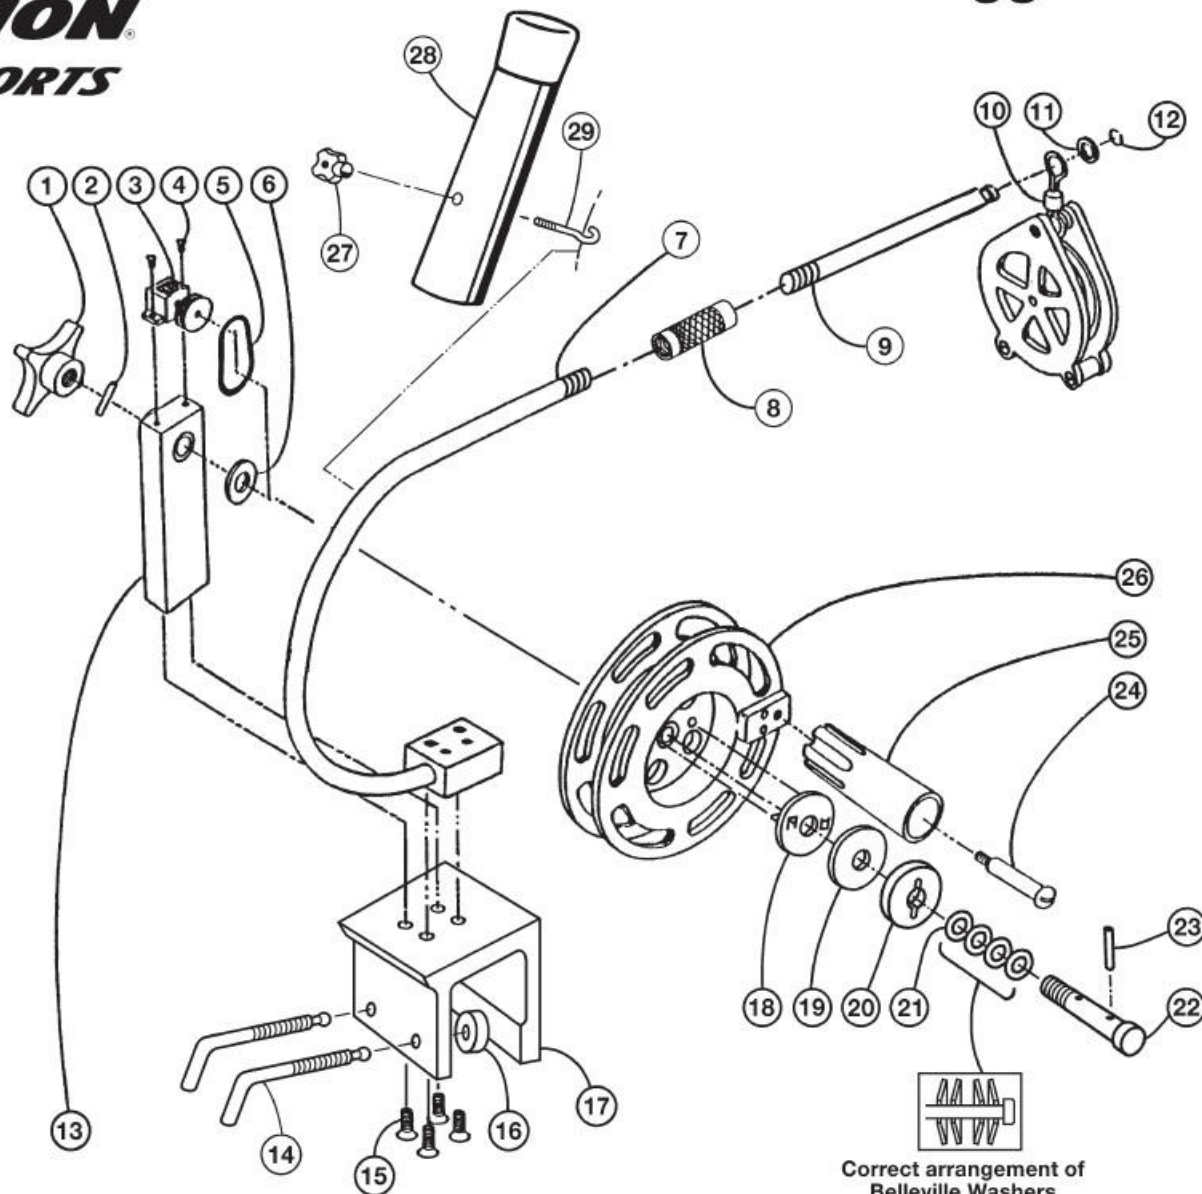

Correct arrangement of
Belleville Washers

Parts List MD00320

Detail No.	Description	Qty.	Order By Part No.
1	Clutch Knob	1	51152
2	1/8 x 1 in. Roll Pin	1	2175
3	Counter w/ Med. Lg. Wheel	1	FC600JD88
4	Counter Screws	2	2014
5	Counter Spring / Small	1	2284
6	1/2 in. I. D. Washer	1	2238
7	J-Rod & Block Assembly	1	MDJROD/ASM
8	Rod Collar	1	51044
9	10-1/2 in. End Rod	1	51123
10	5 Spoke Tip Assembly	1	BJ3039
11	Aluminum Tip Retainer	1	51043
12	Tip Retainer Ring	1	2181
13	318 Upright w/ Bushing	1	51299
14	Clamp Handle	2	51113
15	1/4-20 x 3/4 in. Flat Head Screws	1	51161
16	Clamp Handle Pads	2	51069B
17	Clamp Base	1	51112
18	Inner Clutch Disk	1	51098
19	Graphite Pad	1	2307
20	Outer Clutch Disk	1	51093
21	Belleville Washers	4	2231
22	Inner Shaft	1	51757
23	3/16 x 3/4 in. Dowel Pin	1	2165
24	Bolt w/ Sleeve	1 ea.	2005/51085
25	Handle	1	51161
26	6 in. Reel	1	51174B
27	Mounting Knob	1	51172
28	Rod Holder Tube & Cap	1	51045
29	Mounting Hook	1	2501