



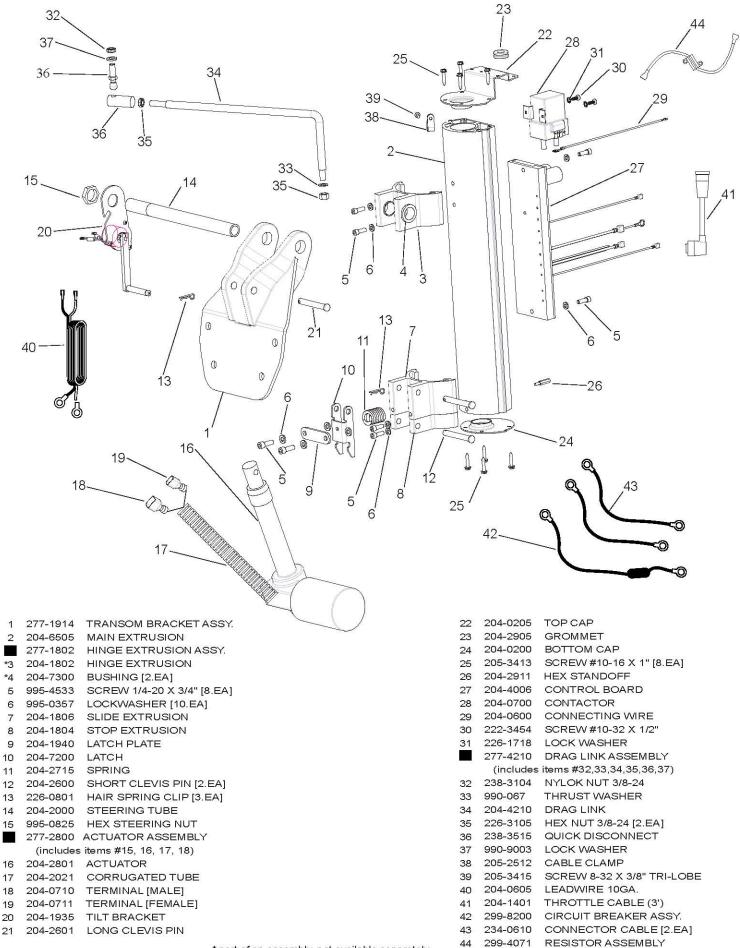

EXTRUSION ASSEMBLY

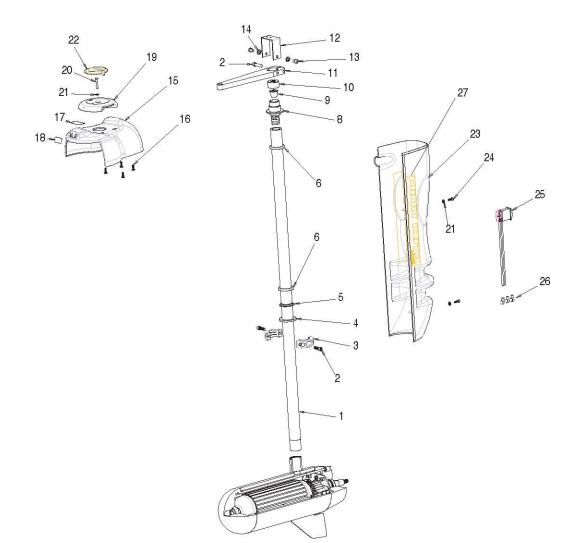

MOTOR SHAFT ASSEMBLY




2	226-3453	1/4-20 X 1 " SHCS [2.EA]
З	226-1619	SPLIT COLLAR
4	204-1700	SPACER WASHER
5	226-6115	BEARING CONE
6	226-6000	BEARING [2.EA]
8	204-6201	MAIN BEARING RACE
9	238-2900	PLUG
10	995-0339	CAP
	277-4200	STEERING ARM ASSEMBLY
	(indudes	items #2 and #12)
*11	(ind udes 204-4200	items #2 and #12) STEERING ARM
*11 12	Sector Sector Sector Sector	a hanna a' a' anna a' anna a' a' anna a'
10000	204-4200	STEERING ARM
12	204-4200 204-1910	STEERING ARM INDICATOR BRACKET
12 13	204-4200 204-1910 204-3416	STEERING ARM INDICATOR BRACKET 1/4-28 X 3/8" BHCS [2.EA]
12 13 14	204-4200 204-1910 204-3416 995-0357	STEERING ARM INDICATOR BRACKET 1/4-28 X 3/8" BHCS [2.EA] 1/4" LOCK WASHER [2.EA
12 13 14 15	204-4200 204-1910 204-3416 995-0357 205-0210	STEERING ARM INDICATOR BRACKET 1/4-28 X 3/8" BHCS [2.EA] 1/4" LOCK WASHER [2.EA SHROUD

1 204-2011 MOTOR TUBE


19	205-0110	POINTER KNOB
20	226-3447	SCREW #8-32 X 1 TRI-LOBE
21	237-1715	#8 LOCK WASHER [2.EA]
22	205-6700	POINTER
	277-0222	SHIELD ASSEMBLY
	(includes	items #23 and #27)
*23	204-0220	SHIELD
24	233-2101	#8-32 X 1/2" [2.EA]
25	299-4022	TILT SWITCH ASSEMBLY
26	204-0340	SCOTCHLOCK CONN. [3.EA]
*27	204-5611	DECAL-SHIELD

LOWER UNIT ASSEMBLY

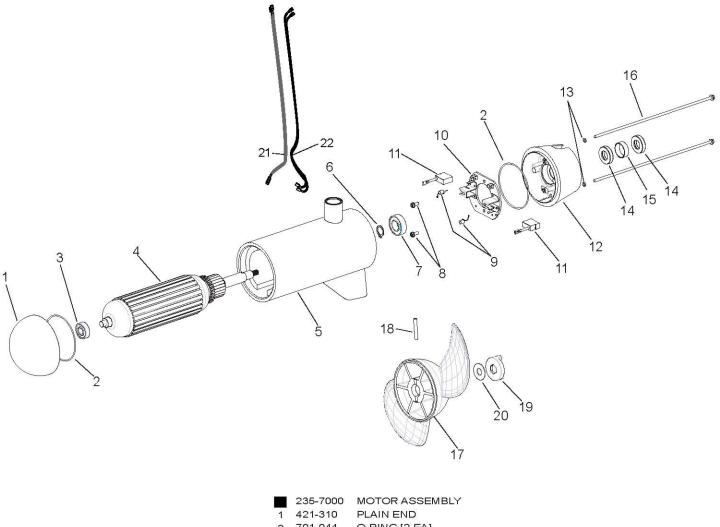


	235-7000	MOTOR ASSEMBLY
1	421-310	PLAIN END
2	701-044	O-RING [2.EA]
з	140-011	BEARING
4	2-100-210	ARMATURE
	92-200-210	CENTER HOUSING ASSEMBLY
*5	2-200-210	CENTER HOUSING
6	788-075	SNAP RING
7	140-013	BEARING
8	205-3410	SCREW [2.EA]
9	975-041	SPRING [2.EA]
	92-600-210	BRUSH PLATE ASSEMBLY
*10	2-600-210	BRUSH PLATE
11	188-096	BRUSH [2.EA]
12	421-210	BRUSH END
	288-4460	SEAL AND O-RING KIT
13	701-009	O-RING-THRU BOLT [2.EA]
14	880-027	SEAL [2.EA]
15	725-097	SEAL SPACER
16	830-096	THROUGH-BOLT [2.EA]
	137-8140	PROP KIT (includes 17,18,19,20)
*17	299-1110	PROPASSEMBLY
	288-2601	PROP PIN / ANODE KIT
*18	235-2601	PROP PIN
19	219-8401	ANODE
20	209-1701	PROP WASHER
21	640-030	BLACK LEAD WIRE
22	640-130	RED LEAD WIRE

THROTTLE ASSEMBLY

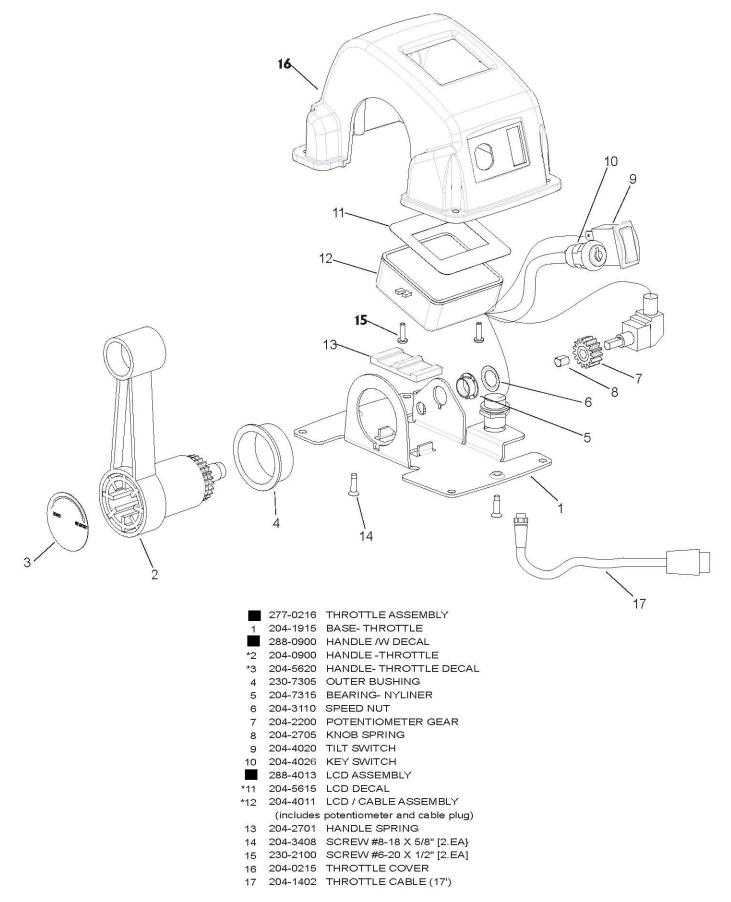

TILT GAUGE ASSEMBLY

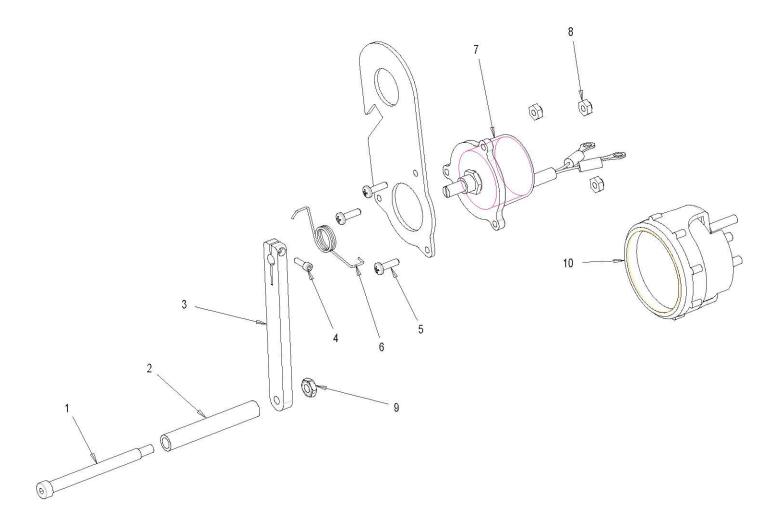

1	204-3500	SHOULDER BOLT
2	204-2005	ROLLER TUBE
3	204-4220	TILT SENDER ARM
4	204-3402	#4-40 X 7/16" SCREW
5	204-3400	#6-32 X 1/2" SCREW [3.EA]
6	204-2710	TORSION SPRING
7	299-8405	POTENTIOMETER ASSEMBLY
8	204-3112	#6-32 NYLOK NUT [3.EA]

- 9 201-3110 #10-24 HEX NUT
- 10 204-4030 TILT GAUGE

