
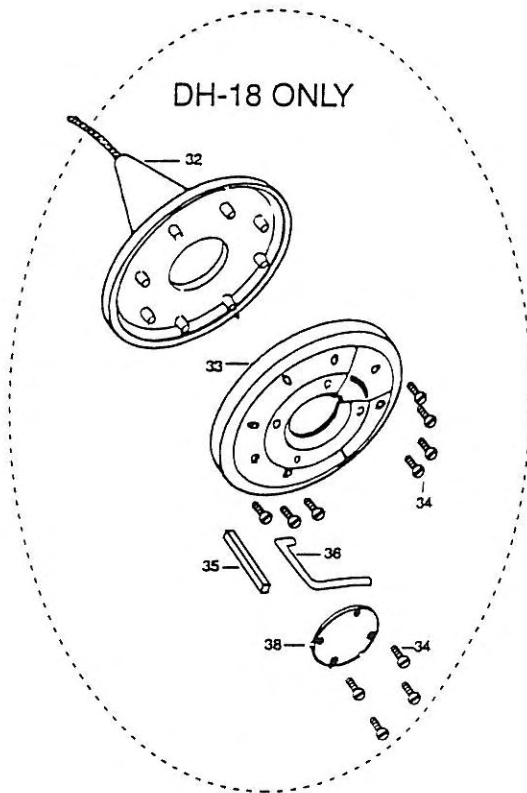
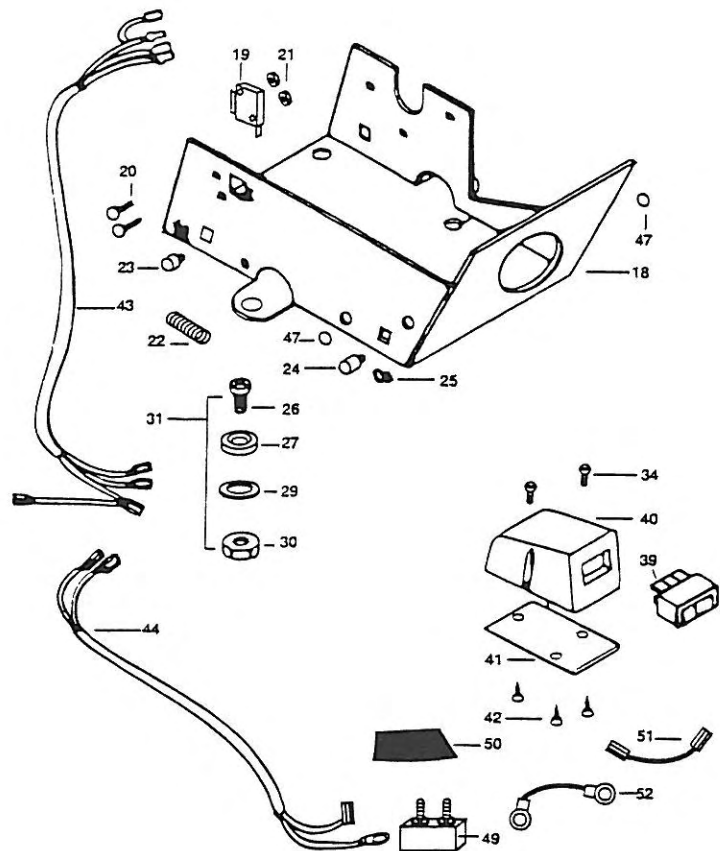
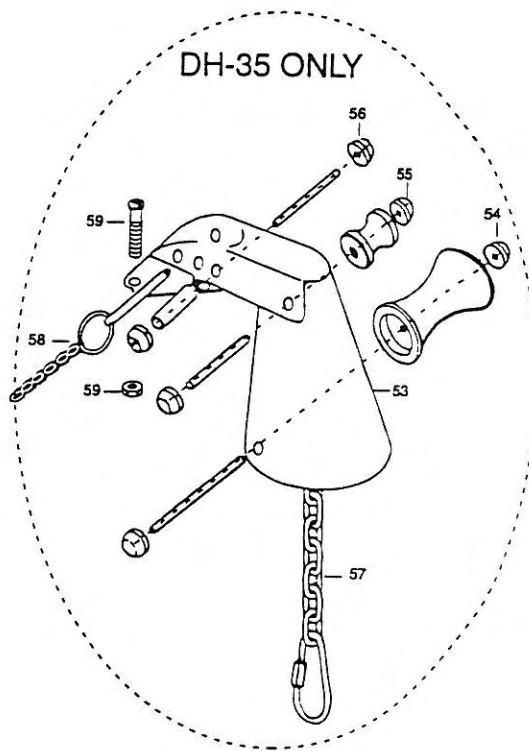


DeckHand 18 & 35
12 volt

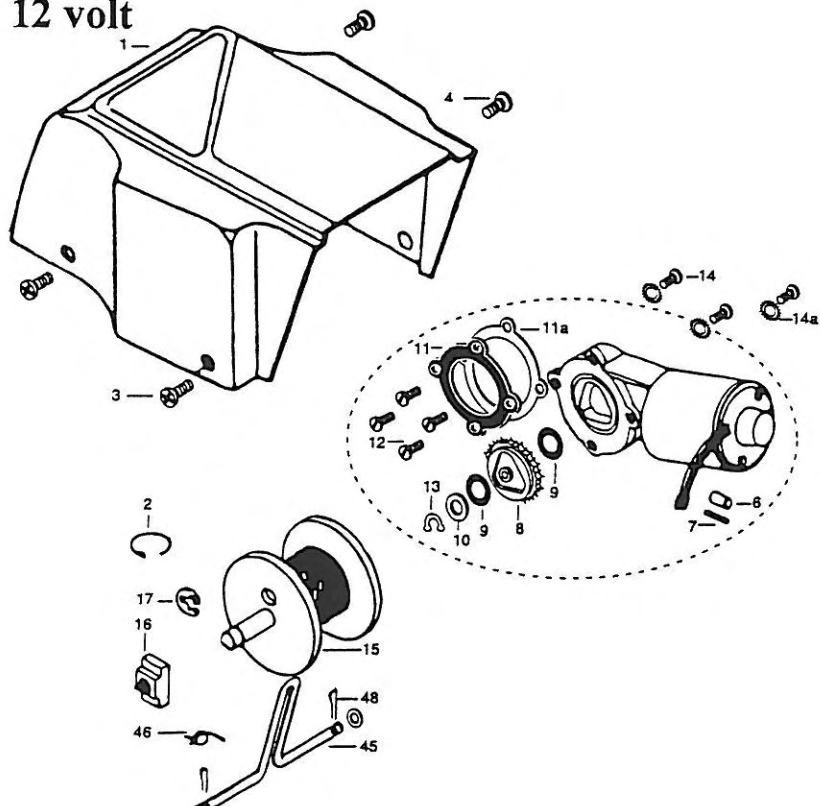

DeckHand 18 & DeckHand 35

1	237-0200	Cover DH-18
	237-0201	Cover DH-35
2	230-3005	Pig Ring (2 .ea DH-18)
	230-3006	Pig Ring (2 .ea DH-35)
3	237-2121	Screw-#8-18 x 1-1/2 Stallgrd (2 .ea)
4	237-2111	Screw-#8-18 x 3/4 Stallgrd (2 .ea)
■	237-7800	Motor Assembly-DeckHand-Includes 6-13
6	237-5400	Shrink Tube 1/4 x 1-3/4 (2 .ea)
7	235-5410	Shrink Tube 3/8 x 2 (DH-35)
8	350-154	Gear
9	990-077	Washer-Nylatron (2 .ea)
10	990-075	Washer-Steel
11	337-015	Cover-Housing
11a	410-015	Gasket
12	830-036	Screw - 10-32 x .375 (4 .ea)
13	237-3002	Snap Ring
14	222-3455	Screw-#10-32 x 1/2 (3 .ea)
14a	226-1718	Washer-Lock Star #10 Ext Tooth (3 .ea)
15	237-7900	Spool includes 60' rope
16	237-0000	Bearing-Spool
17	226-3010	E-Ring 3/8 Dia Shaft
18	237-1900	Base-Mounting E-Coat
19	237-4010	Switch-Momentary Anchor
20	237-2130	Screw-#4-40 x 3/4 PPH (2 .ea)
21	237-3100	Nut-Con/Mom Swt Anchor (2 .ea)
22	237-2700	Spring-Anchor
23	237-2900	Grommet-Anchor Cover Short (2 .ea)
24	237-2910	Grommet-Anchor Cover Long (2 .ea)
25	237-6300	Wire-Routing Clip (2 .ea)
■	299-4803	Bag Assembly (includes 26-30)
26	215-3501	Bolt-Mounting 3500 w/stallgd (4 .ea)
27	230-1720	Mounting Washer-Rubber (6 .ea)
29	215-1726	Washer 5/16 STD SS (4 .ea)
30	215-3100	Nut 5/16 (4 .ea)
32	237-8000	Anchor-Upper Half
33	237-8100	Anchor-Lower Half
34	237-2100	Screw #8-18 x 5/8 (as required)
35	237-2800	Keeper Block
36	237-3600	Lock Pin-Anchor
38	237-6700	Plug-Anchor
39	237-4000	Switch-Control Anchor
40	237-6500	Switch Housing (DH-18)
	237-6501	Switch Housing (DH-35)
41	237-6510	Switch Plate
42	237-2150	Screw-Switch Plate 6-20 x 1/2 (3 .ea)
43	237-0700	Control Wire (DH-18)
	237-0701	Control Wire (DH-35)
44	237-0602	Leadwire (DH-18)
	237-0603	Leadwire (DH-35)
45	237-1610	Rope Guide
46	237-2710	Spring-Rope Guide
47	215-1700	Washer-Eye Shaft (2 .ea)
48	237-2615	Cotter Pin 3/32x3/4 (2 .ea)
49	237-8202	Circuit Breaker
50	237-2031	Tubing-Heat Shrink
51	237-0300	Connecting Wire
52	237-1412	Connecting Cable 14ga (DH-18)
	237-1410	Connecting Cable 10ga (DH-35)
53	237-8410	Davit Assembly
54	277-4800	Large Roller Assembly
55	277-4801	Small Roller Assembly
56	277-4802	Sleeve Roller Assembly
57	277-4803	Safety Chain Assembly
58	277-4804	Safety Pin Assembly
59	277-4805	Mounting Bolts and Nuts (4 .ea)
■	299-4804	Bag Assembly-DH 18 (anc. plug + screws)

Deck Hand Electric Anchors (DH 18 & DH35) Wiring Diagram

CAUTION:

- Improper polarity hook-up of battery leadwire could cause severe damage to gear motor.
- The DeckHand is provided with a sealed control switch and circuit breaker. Substituting switches or installing multiple switches other than those provided will void manufacturers warranty.

